



MONITOR 22 EXPLODED VIEW

# MONITOR 22 SERVICE PARTS LIST

## MONITOR 22 SERVICE PARTS LIST

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	6200	SPILL TRAY	59	6136	RUBBER BUSH
2	5019	LEG	60	6151	OVER HEAT THERMOSTAT
3	6101	AIR SUPPLY HOSE (A)	61	6152	FAN THERMOSTAT
4	6102	AIR SUPPLY HOSE (B)	62	6163	AIR PACKING SET
5	6103	FUEL PIPE	63	6139	POWER SUPPLY CORD
6	6104	FUSIBLE VALVE	64	4833	CORD BUSHING
7	6105	CONSTANT LEVEL VALVE	65	6037	LEVEL GUIDE
8	6106	C.L.V.STRAINER	66	6138	CARRYING HANDLE
9	6189	STRAINER GASKET	67	6186	SENSOR ASSY
10	6108	SOLENOID PUMP PACKING	68	6205	SLIDE SWITCH ASSY
11	6109	SOLENOID PUMP	69	6206	SLIDE SWITCH COVER
12	6110	OIL SUMP PIPE	70	6207	SLIDE SWITCH PANEL
13	6164	JOINT SEAL PACKING	71	6208	SLIDE SWITCH KNOB
14	6111	FUEL SUMP	72	6140	BLOWER ASSY
15	6112	GASKET (1)	73	6141	BLOWER MOUTH PACKING
16	6182	BURNER	74	6142	DAMPER SOLENOID ASSY
17	6113	BURNER CLOTH	75	6143	SUCTION CASE
18	6114	GASKET (2)	76	6144	SEAL PACKING
19	6115	GASKET (3)	77	6160	BLOWER GUARD
20	6116	HEATER	78	6161	CIRCULATION MOTOR
21	6195	IGNITER BRACKET	79	6180	FAN BLADE
22	6117	HEATER COVER PACKING	80	6192	WIRING GUARD
23	6191	IGNITER COVER	81	6193	WIRING HARNESS(FAN MOTOR)
24	6118	FLAME DETECTIVE PLUG	82	4004	JOINT PIPE
25	6119	PLUG PACKING	83	6209	AIR DAMPER (S)
26	6196	FL PLUG BRACKET	84	6145	AIR SUPPLY HOSE ASSY
27	6120	GASKET (4)	85	4014	EXHAUST OUTLET CAP
28	6121	HEAT EXCHANGER ASSY	86	4016	AIR PORT O RING
29	6122	GASKET (6)	87	4006	PIPE HOLDER
30	6123	EXHAUST DUCT	88	4008	HOSE BAND
31	6176	O-RING (P39)	89	4805	AIR OUTLET CAP
32	6124	WINDOW GASKET	90	6147	FLUE PIPE ASSY
33	6125	WINDOW FRAME GASKET	91	6148	SLEEVE FLANGE SET
34	6068	WINDOW PLATE	92	6149	UNDER COVER
35	6069	WINDOW GLASS	93	6210	LOUVER
36	6126	WINDOW BASE GASKET	94	6211	FRONT COVER
37	6127	COMBUSTION CHAMBER	95	6154	SWITCH ASSY
38	6181	COMBUSTION RING ASSY	96	6155	LAMP ASSY
39	6128	BURNER CAP	97	6156	TOP COVER
40	6129	BAFFLE ASSY	98	6212	LAMP PANEL
41	6130	CHAMBER GASKET	99	6158	FUEL TANK COVER
42	6131	CHAMBER CAP	100	6159	FUEL TANK ASSY
43	6132	POWER TRANSFORMER	101	6179	FUEL TANK CAP
44	6201	PWB ASSY	102	6165	FLOAT SWITCH
45	6134	PWB SPACER CLIP (A)	103	6178	FLOAT SWITCH PACKING
46	6135	PWB SPACER CLIP (B)	104	6177	OIL FILTER
47	6202	MICROPROCESSOR	105	6162	RESISTOR
48	6168	RELAY (A)	106	6213	CABINET ASSY
49	6169	RELAY (B)	107	6345	UNION NUT
50	6203	BUZZER	108	6194	WALL CLAMPS
51	6172	FUSE (250V 10A)	109	6214	BASE TRAY RETAINER
52	6173	FUSE (250V 2A)	110	6197	SCREW SET FOR FLUE PIPE
53	6170	CAPACITOR (1.5 $\mu$ FD)	111	6215	CARTON BOX
54	6187	TR ARRAY (M54563P)IC3	112	6175	CUSHION SET
55	6204	PHOTO COUPLER(IC9~11)	113	1148	OWNERS GUIDE
56	6137	CORD CONNERCTOR	114	8216	TOUCH-UP PAINT(WHITE)
57	6107	AIR LINE	115	8217	GLUE
58	6184	AIR PRESSURE SWITCH	116	8219	TOUCH-UP PAINT(GREY)